

10892-02H ASSEMBLY INSTRUCTION

1

3

5

2

4

6

| | | | | | | | | | | | |
|---------------|----------|------------|--------------|-------------|----------------|----------------|-----------|---------|---------|---------|-------------|
| ① 5-STAR BASE | ② CASTOR | ③ GAS LIFT | ④ DUST COVER | ⑤ MECHANISM | ⑥ SEAT CUSHION | ⑦ BACK CUSHION | ⑧ ARMREST | ⑨ SCREW | ⑩ SCREW | ⑪ SCREW | ⑫ ALLEN KEY |
| 1 PC | 5 PCS | 1 PC | 1 PC | 1 PC | 1 PC | 1 PC | 1 PAIR | 4 PCS | 6 PCS | 4 PCS | 1 PC |