


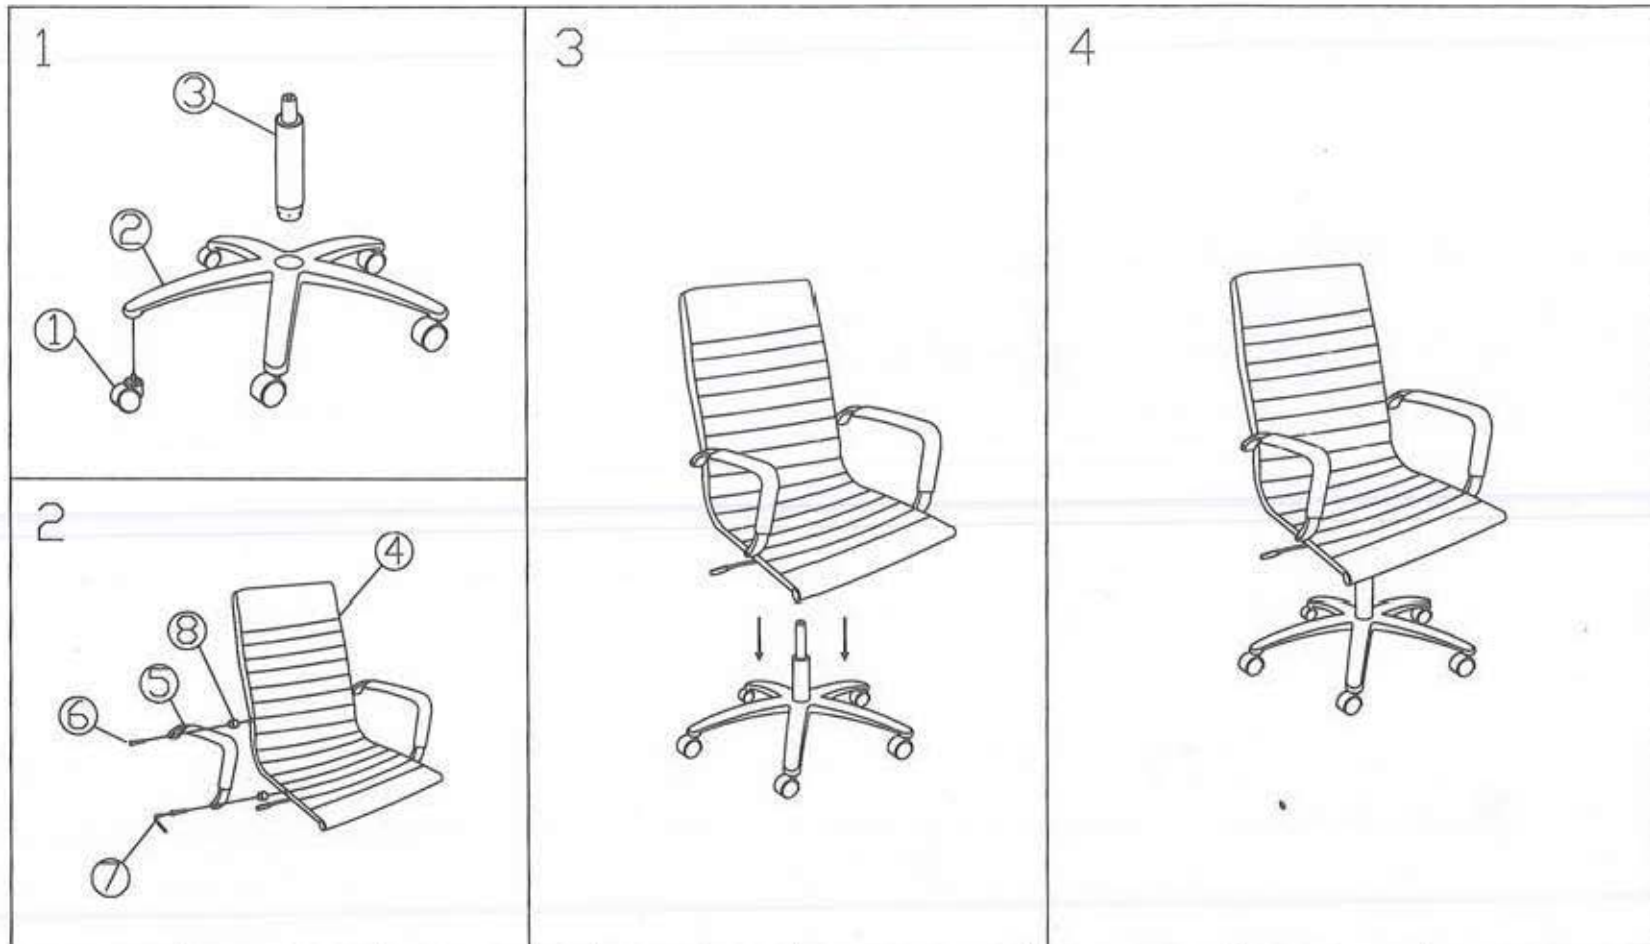







Contempra 1-289-01 Assembly Instruction



① CASTOR	② 5-STAR BASE	③ GASLIFT	④ BACK&SEAT CUSHION	⑤ ARMREST	⑥ SCREW 5/16" x 2"	⑦ ALLEN KEY	⑧ WASHER
							
5 PCS	1 PC	1 PC	1 PC	1 PAIR	4 PCS	1 PC	4 PCS